


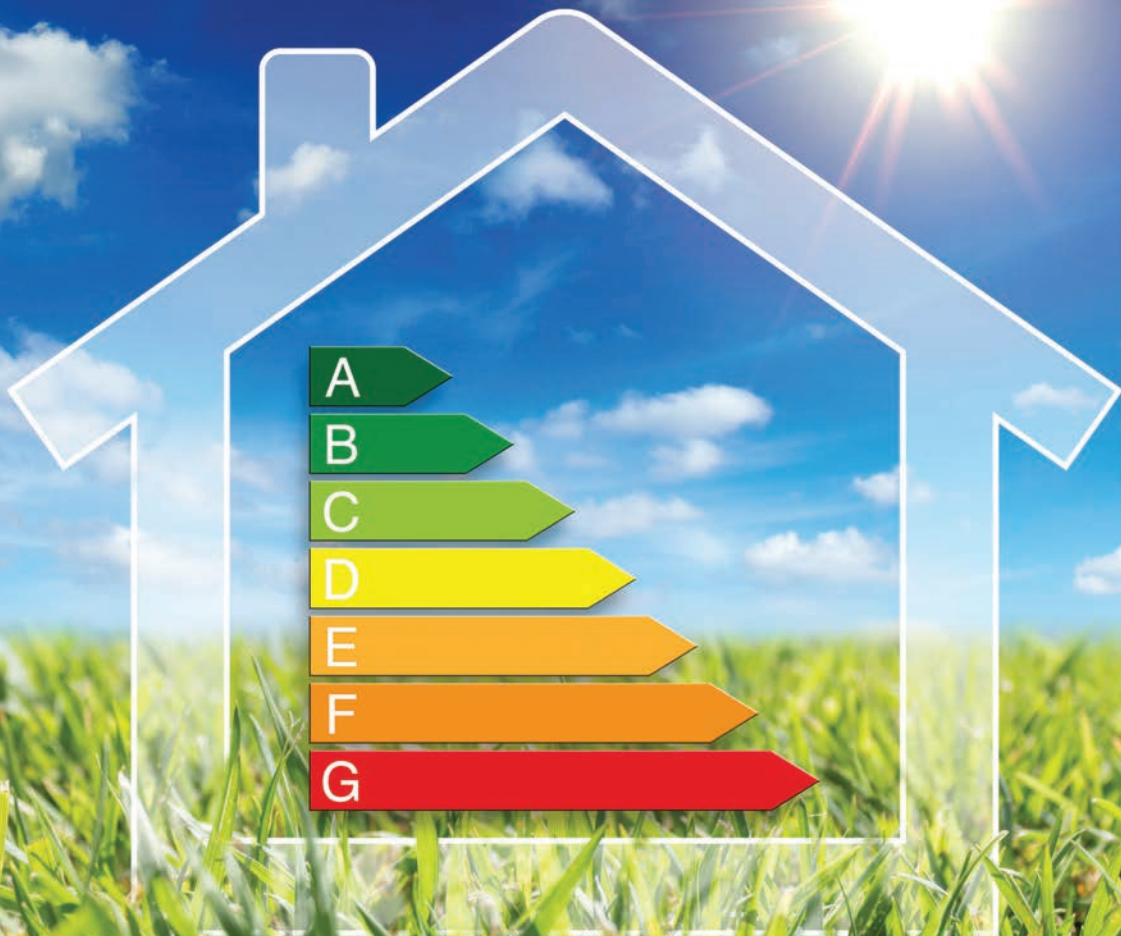

Warmline PHE

Phenolic Bonded to Plasterboard

The Warmline insulating laminates are designed as a simple effective way to improve the thermal efficiency in both walls and roof applications. They are fully applicable with Part L of the building regulations.



U Value
Insulation and
Drywall Products




Phenolic Foam Bonded to Plasterboard Benefits

- All thicknesses readily available
- Simple solution to upgrading walls and roofs
- Quick and easy to install
- Can be used for both newbuild and refurb
- A simple way to meet building regulations
- Cost effective return

Technical Specifications

Product Code & Size	Description	Overall Thickness	Foam Thickness	Plasterboard Thickness	Sheets per Pallet	m ² per Board	Thermal Resistance R-value	U-value Fixed Batons (W/m ² K)	U-value Dot & Dab (W/m ² K)
Warmline PHE 1.2 x 2.4	Phenolic Bonded to Plasterboard	30mm	20mm	9.5mm	74	2.88	0.997	0.613	0.638
		35mm	25mm	9.5mm	66	2.88	1.235	0.535	0.554
		37.5mm	25mm	12.5mm	58	2.88	1.250	0.531	0.549
		40mm	30mm	9.5mm	55	2.88	1.474	0.474	0.489
		42.5mm	30mm	12.5mm	52	2.88	1.489	0.471	0.485
		50mm	40mm	9.5mm	44	2.88	1.950	0.387	0.397
		52.5mm	40mm	12.5mm	42	2.88	1.965	0.385	0.394
		60mm	50mm	9.5mm	36	2.88	2.426	0.327	0.334
		62.5mm	50mm	12.5mm	35	2.88	2.441	0.325	0.332
		70mm	60mm	9.5mm	32	2.88	2.902	0.283	0.288
		72.5mm	70mm	12.5mm	30	2.88	3.393	0.248	0.252
		80mm	70mm	9.5mm	28	2.88	3.378	0.249	0.253
90mm	80mm	9.5mm	24	2.88	3.855	0.223	0.224		

Calculations are based on a 215mm thick solid brickwork wall and includes a 2mm plaster skim coat. Timber battens are 25x50mm at 600mm Centres

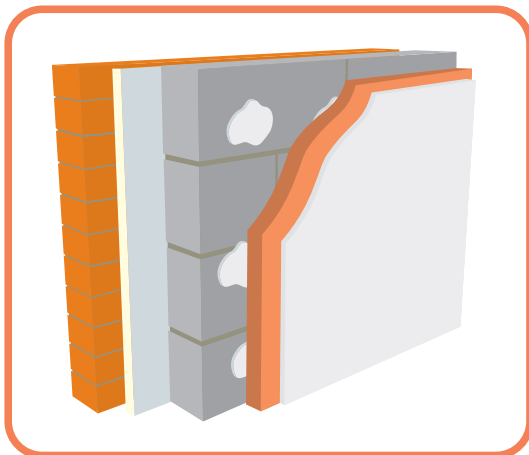


Fixing instructions for Dot and dab

- For bonding Warmline range to a wall use a proprietary gypsum based adhesive.
- Please follow the manufacturers instructions. As per manufacturers recommendations apply a continuous ribbon of adhesive around any openings.
- Apply 3 vertical rows of adhesive dabs to the walls at 300mm centres. Also insure that there is a continuous bead at the bottom and top.
- After the adhesive has set fix a minimum of 2 insulation anchors through the board into the wall. They must go into the masonry by a minimum of 30mm.

Fixing instructions for mechanical fixing

- Fix to the wall treated batons 50mm x 25mm at a maximum of 600mm centres. Also fit horizontal batons at both floor and ceiling level.
- Then fit the Warmline board using drywall screws at 150mm centres. Always insure that they penetrate the batons by 25mm.
- When installing boards to rafters fix them at right angles to the timbers. To ensure a solid finish bridging pieces are to used inbetween the rafters.

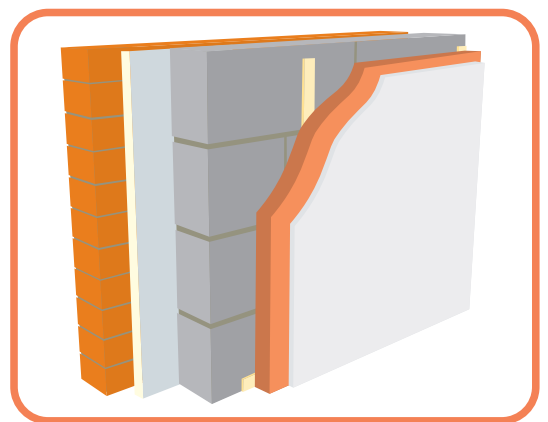

Insulation Manufacturers & Distributors

For more details you can contact our technical team

Unit 6, Coopers Point, Coopers Lane, Knowsley Industrial Park, Liverpool L33 7UB

Sales: **07872 989689** Main Depot: **01515 463260** Fax: **0151 5484543**

